

Many of the Dynalite lighting accessories shown here are interchangeable with other Dynalite flash heads and monolights.




		1015 2040	4040 4080	Uni250R Uni400JR
RR-50	50° Reflector—10" diameter	1		
RR-80	80° Reflector—9" diameter	1		
RR-AR	Angle Reducing Ring 140-60°	1		
RR-AF	Accessory Frame	1		
RR-AFBD	Accessory Frame w/4/Barn Doors	1		
RR-GH	7" Grid Spot Holder	1		
RR-4G	7" Grid Set (10,20,30,40°)	1	1	1
SR-65	65° Grid Reflector 7" diameter		1	
UNI-GR7	65° Grid Reflector 7" diameter			1
SR-65FF	Barn Door & Filter Frame f/SR-65		1	1
SR-50	50° Grid Reflector 9" diameter		1	
UNI-GR9	50° Grid Reflector 9" diameter			1
SR-503G	9" Grid Set (20,30,40°) f/SR-50		1	1
SR-503D	9" Barn Door & Filter Frame f/SR-50		1	1
SR-80	80° Softlight Reflector w/ diffuser		1	1
SR-80FD	Silk Diffuser for SR-80 Reflector		1	1
AR-0040	40° Long Throw Reflector 11" diameter		1	
SR-65SN	Snoot for SR-65	1	1	1
SR-OS	Optical Snoot (only)		1	
LB-2432	ProV 24" x 32" Lightbank	1	1	1
LB-3648	ProV 36" x 48" Lightbank	1	1	1

All Dynalite speedrings, umbrellas, and light stands work with all Dynalite flash heads.

Instruction Manual

For Models:

Accessory Frame RR-AF
Barn Doors RR-AFBD

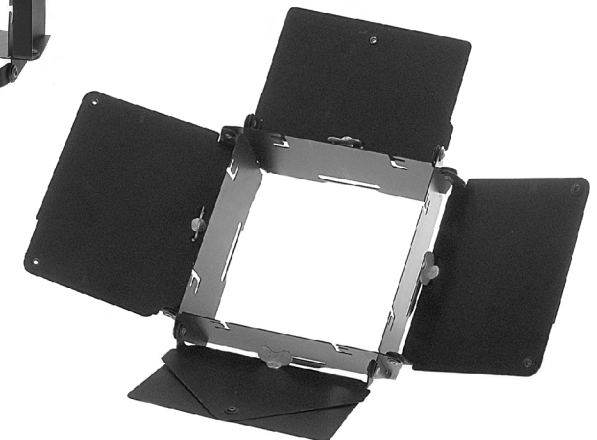

1050 Commerce Ave
Union, NJ 07083
800-722-6638 / Fax 908-686-6682
flash@dynalite.com
www.dynalite.com

Important Safeguards

Please take a moment to read these safety precautions and instructions. Spending a few moments now will ensure years of use in the future.

- 1 Read and understand all instructions.
- 2 Care must be taken as burns could occur from touching the modeling lamp(s) or flash tube(s).
- 3 Do not install or remove any accessory until the flash head is disconnected from power pack.
- 4 Allow flash heads and accessories to cool completely before storing or removing accessories or flash head.
- 5 Do not let cords or cables hang on or touch hot accessories or surfaces.

Please save these instructions so that all users may read this information.

Barndoor & Accessory Frame Instructions

Your new Dynalite Barndoor/Accessory Frame is designed to provide creative light control and interface Dynalite flash heads with Lowel® Light control accessories.

- 1 The Barndoor and Accessory Frame mounts onto the accessory ring on the front of all Dynalite flash heads. It can be removed by pushing out two adjacent sides while pulling one corner forward.
- 2 Both hold up to two accessories (Lowel scrims, diffusion glass, etc.) and rotates a full 360°.
- 3 All doors have two extending wings which can be used for maximum light control or creating special shadows.
- 4 Locking door fasteners requires ¼ turn to remove or install.
- 5 If Barndoor fails to maintain proper mounting tension, the frame should be removed and squeezed inward very slightly.

When inserting Lowel Accessories, handles are sprung together to insert or Remove from Barndoor or Accessory Frame. When a wire scrim and glass accessory are used together, the wire scrim should be placed closest to the lamp to reduce the possibility of damage to the glass accessory.

Accessories for Barndoor & Accessory Frame

The following list of Lowel® light control accessories can be used with the Dynalite Barndoor and Accessory Frame. You can purchase these accessories at any authorized Lowel dealer.

Lowel Light Control Accessories:

Full Scrim (#01-54):

Reduces light intensity by approximately one "f" stop.

Half Scrim (#01-55):

Covers half of reflector and rotates 360°. Darkens washed out foregrounds, compensates for subjects "burning up" as they approach the light.

Graduated Scrim (#01-56):

Same principle as Half Scrim, but effect is more gradual.

Clear Glass Filter (#01-52):

Absorbs U.V. light rays (see warnings).

Diffused Glass (#01-50):


Softens highlights and shadows. Absorbs U.V. light rays (see warnings).

Cookaloris (#01-53):

Produces an overall soft shadow pattern, can be used to "break up" a plain background.

Snoot:

Produces a reduced circle of light.

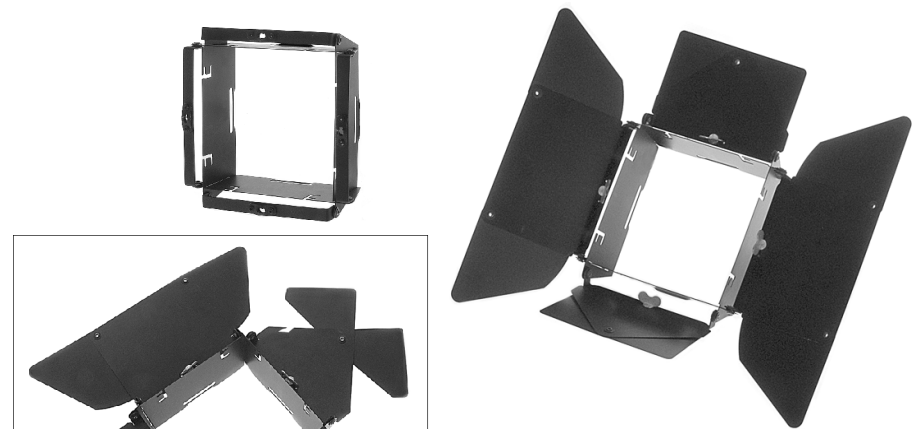

NOTE: Lowel part numbers are listed for your convenience. Lowel® is a registered trademark